



A2™ AceClamp® Installation Instructions



1. Tilt A2™ AceClamp® so pins open to fit your roof panel.




2. Position A2™ AceClamp® on roof panel. See line drawing below for panel orientation.



3. Tighten A2™ AceClamp® on roof panel with 9/16 socket.



4. Torque A2™ AceClamp® with a calibrated torque wrench to specs.
195 in/lbs – Steel Roof
165 in /lbs – Aluminum Roof.

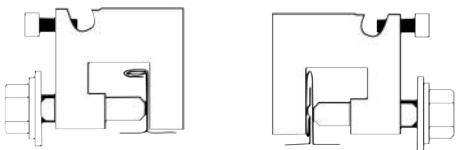

Line Drawing

At no time should you use the A2™ AceClamp® as part of your fall-protection system!

Proof is on the Roof™ Made in the U.S.A.

