



### **EZ3 Roof Mount System:**


Installation Instructions for attaching the EZ3 Roof Mount Kit to composite shingle roofs. The SunModo EZ3 Roof Mount Kit comes complete with Flashing, Lag Screw with Spherical Washer, L-Foot and 3/8 Hardware.



Locate roof rafters and mark locations on roof. Drill 7/32" pilot holes and backfill with sealant. Slide flashing between 1st and 2nd course of shingles, ensuring flashing does not overhang the downhill shingle.



Secure the L-Foot to the Flashing by lining up the supplied Lag Bolt with Spherical Washer with the pilot hole. Fully seat the Lag Bolt with Spherical Washer.

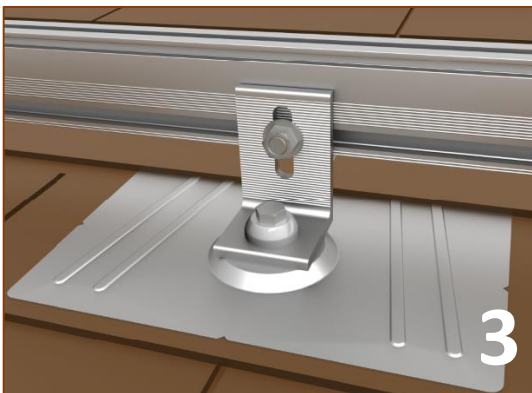

Using the 3/8" hardware supplied attached the Rail to the L-Foot.

### **Tools Required:**

7/32" long-style bit, drill, torque wrench, sockets set, structural sealant such as Chem-link M1, or Uniflex KST058XXX for wood and composite roofs, caulking gun, tape measure, string line or laser line.